

QUICK START GUIDE (EL-USB-TC-LCD-N)



HOT COILS®

For full Installation and Operation Manual, see the CD.

1

FIRST INSTALL YOUR BATTERY

Before using the data logger you will need to insert the 3.6V 1/2AA battery provided, following the instructions below. Replacement batteries available from www.hotcoils.com, PN: BAT 3V6 1/2AA



1

2

3

 
4

2

THEN INSTALL YOUR SOFTWARE & USB DRIVER


Windows™ 2000/XP/VISTA/7

1. Insert the EL-USB-USB CD into the CD drive of your computer. If the CD does not automatically load, navigate to the CD and double click "Setup".

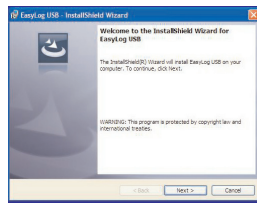

2. Click "Next".

 
5. If a screen appears asking if you want to allow the following program to install software on your computer, click "Yes".

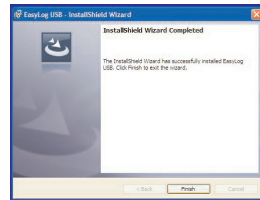


6. Click "Finish"



 3. Read the "IMPORTANT NOTICE", select "I Agree" and "Next".

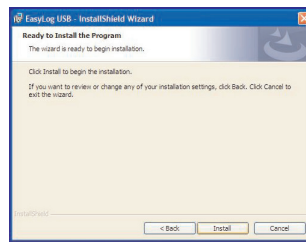

 4. Click "Install".

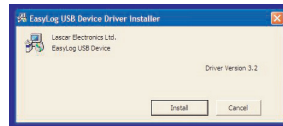

7. Click "Install"



8. You have successfully installed the necessary software and driver for your EL-USB data logger. An "EasyLog USB" icon will be placed on your desktop.

3

YOUR DATA LOGGER IS READY FOR USE

 
Ensure the battery is correctly installed.

Insert the data logger into an available USB port on your PC.

Double click on the EasyLog USB icon on your desktop. This will load the configuration software. Setup the data logger for a new log, download a data logger that has been recording, view previously saved data in graph format and check the current status of the attached data logger (including the serial number).

When setup is complete, the data logger should be removed from the USB port to begin recording. If you would like advice on how to best use the data logger for a particular application, please contact your nearest Hot Coils representative.


Do not leave your data logger in the USB port as this will cause some of the battery capacity to be lost.

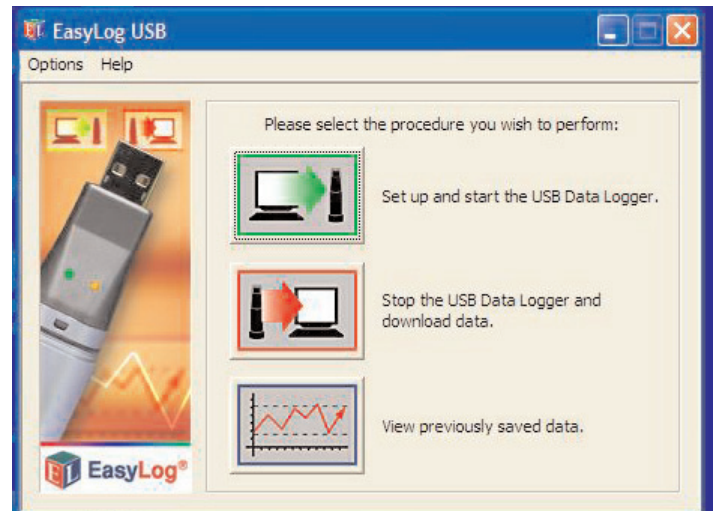

Set-up, stop or view previously saved data.

Name your logger and select a sample rate.

 
YOUR OWN IN HOUSE HEATING CREW

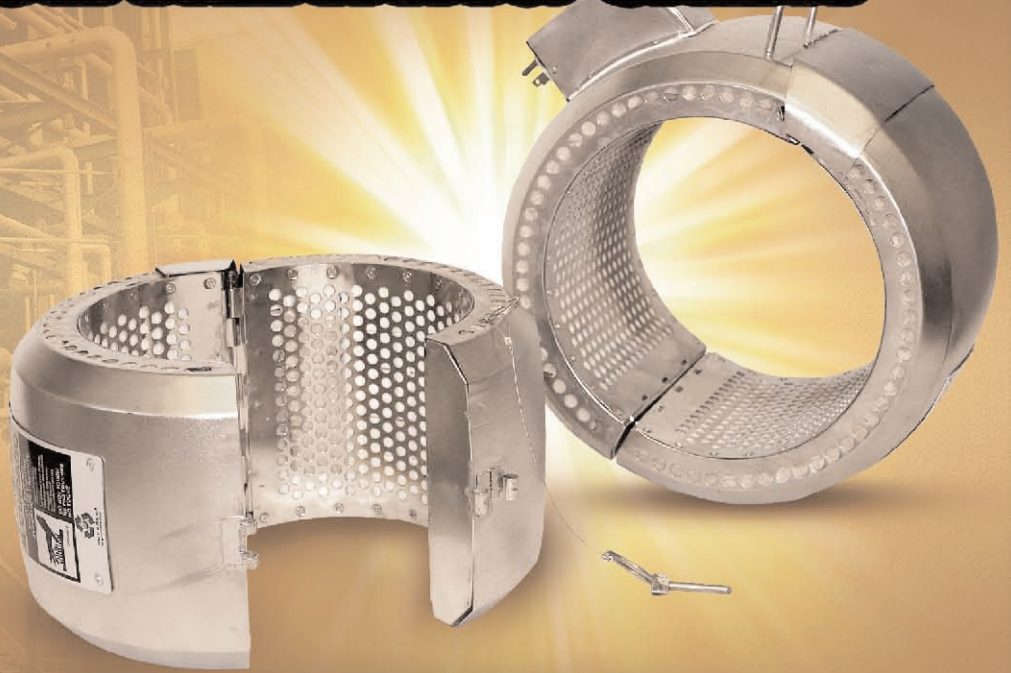

The days of waiting for a **SPECIALIZED HEATING SERVICE** to show up are over! Ready when you are with Hot Coils® you have your own heating crew always on standby.

Hot Coils® new preheat technology lets you preheat pipe prior to welding without the need of specialized labor or outside services. Hot Coils® operate on any available 110 volt 15 amp power source and will quickly preheat pipe up to 550°F (286°C). Its adjustable thermostat which is accurate within +/- 2.5° will easily hold any desired temperature and keep you on spec. every time.

 Take charge of your preheat needs and put Hot Coils® to work with your crew.

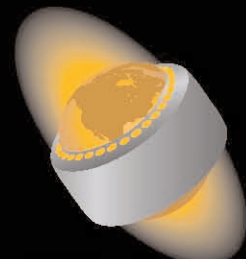

HOT COILS®

WWW.HOTCOILS.COM

Check out all of our HOT COILS products at:

WWW.HOTCOILS.COM